
copyright © 2017



1		1	
2		1	
3		1	
4		2	
5		1	
6		1	
7		1	
8		2	
9		1	

		RG-IIB-K75A	RG-IIB-K86A
		LCD-LG	LCD-LG
		3840X2160	3840X2160
		450 cd/	400 cd/
		1200 1	1200 1
		8ms	8ms
		60Hz	60Hz
		178°(H)/178°(V)	178°(H)/178°(V)
		>30000hrs	>30000hrs
		1741.7x103.4x1060.2(mm)	1995.2x111.9x1206.3(mm)
		77.4 Kg±1.5 Kg	97.5 Kg±1.5 Kg
		59.1 Kg±1.5 Kg	76.6 Kg±1.5 Kg
		600mm 400mm	700mm 400mm
	(OPS)	≤400W	≤440W
		<0.5W	<0.5W
		20	
		<10ms(typ)	
		90%	±1mm

0 -40

10% - 90% R

	1
RS-232	1
	1
S/PDIF	1
AV	1
HDMI	1

5000m

5000m

5000m

 
3

 
4

44

11

		/PCS	
		1	
		2	
	VESA PE 0.04mm*150mm*190mm	1	
	8*80m	8	
	Φ4*10mm 8mm	2	+
	M5*100mm	2	+

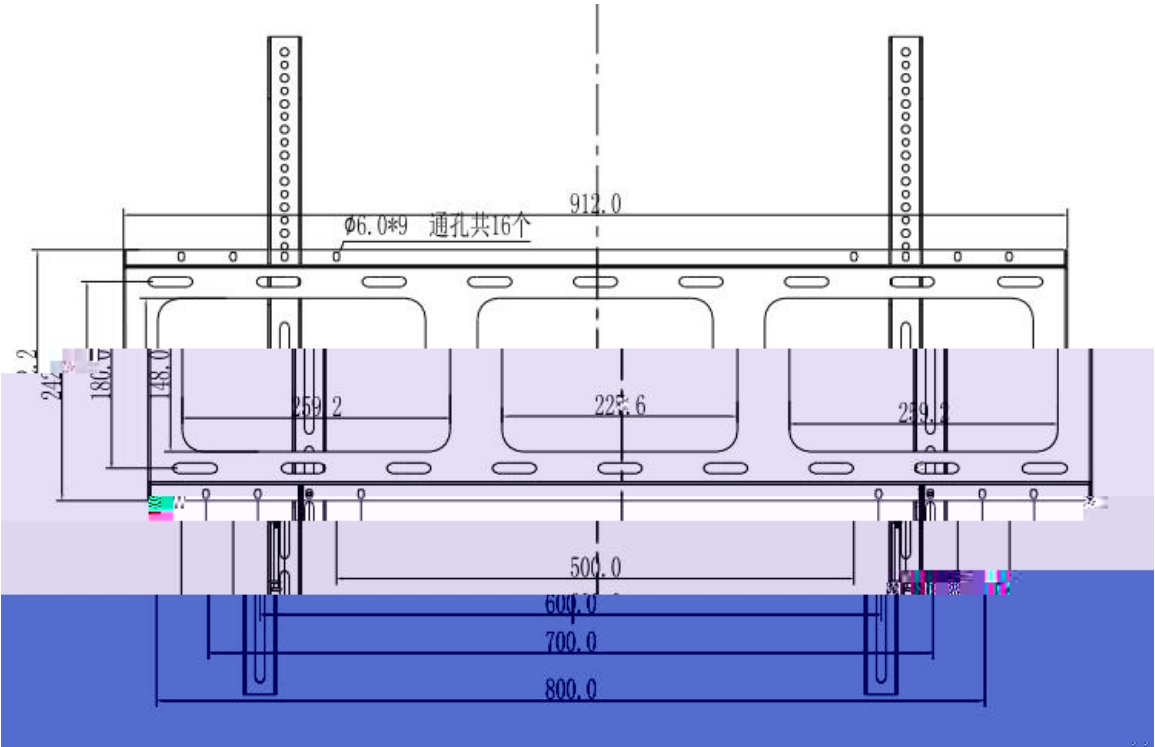

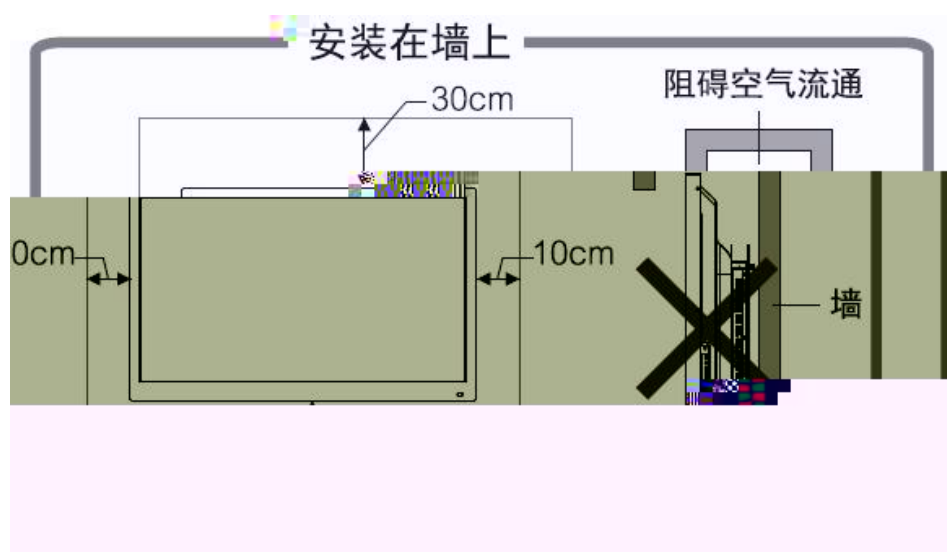


1

2 M4

A

 
160KG

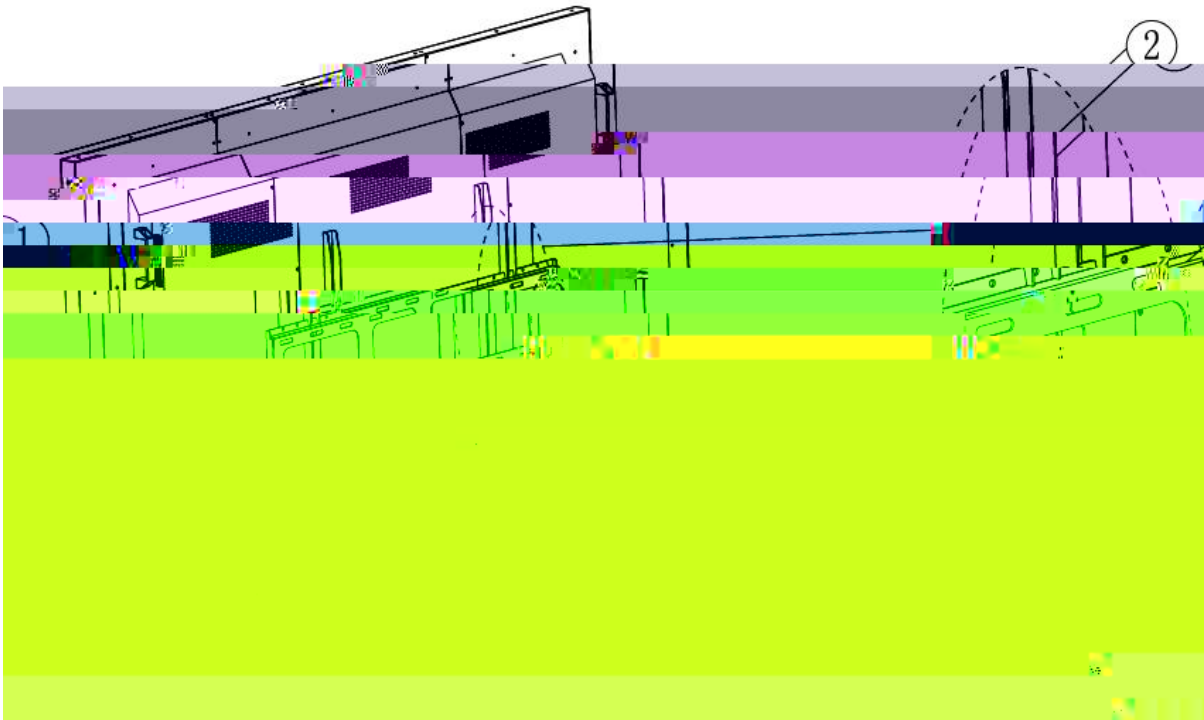

2 M5*100

2mm-10mm

 B;

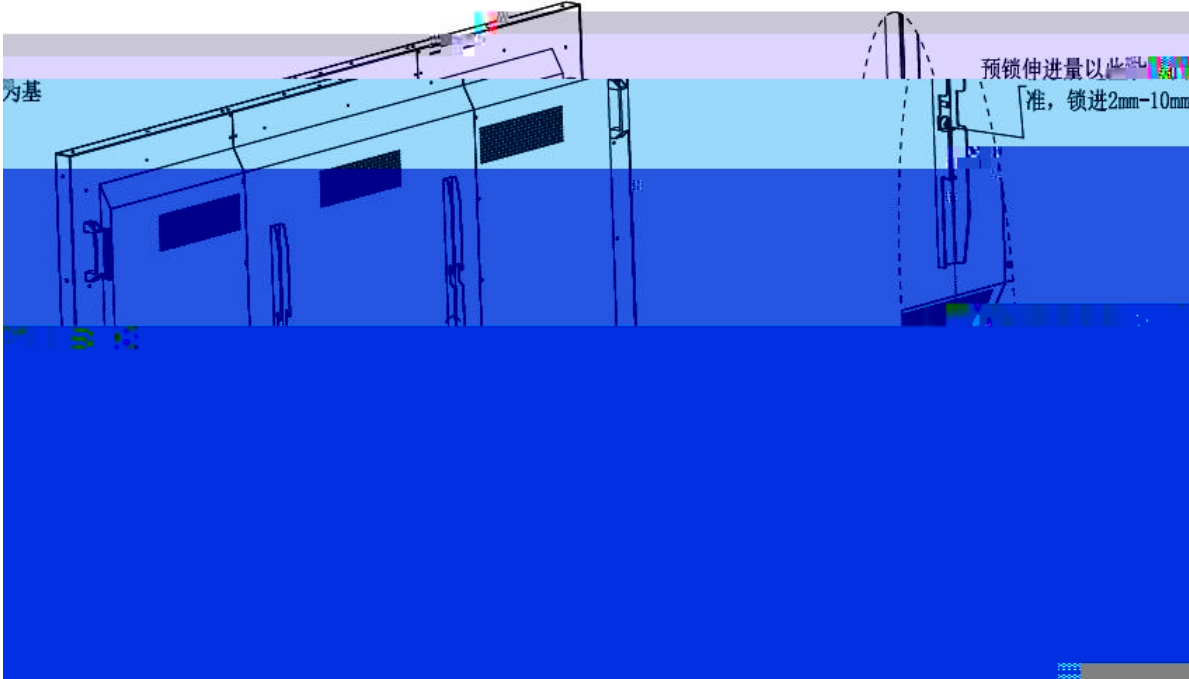

3

10mm

 
8*80

4

8


85mm

C

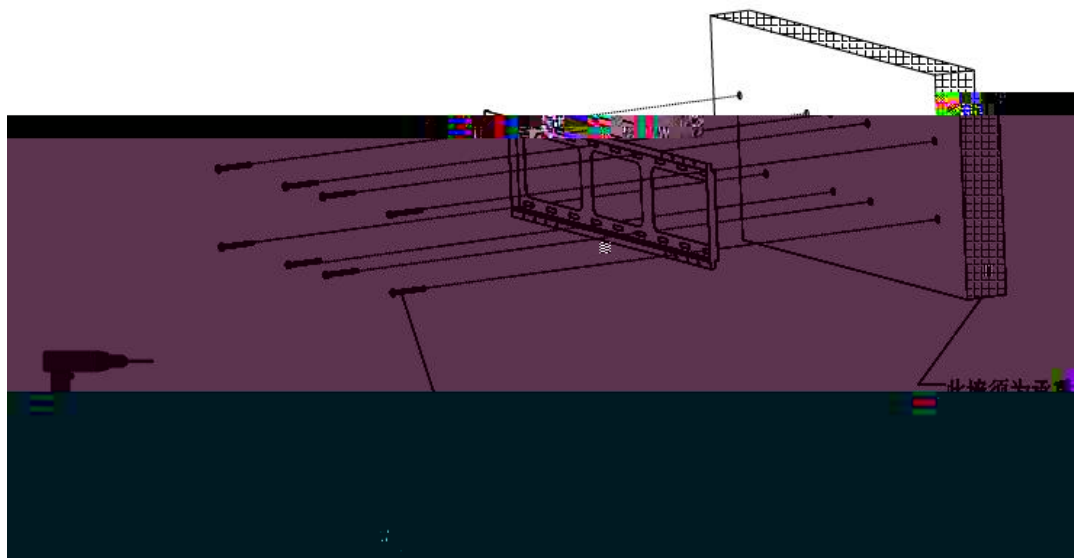

4

 
D

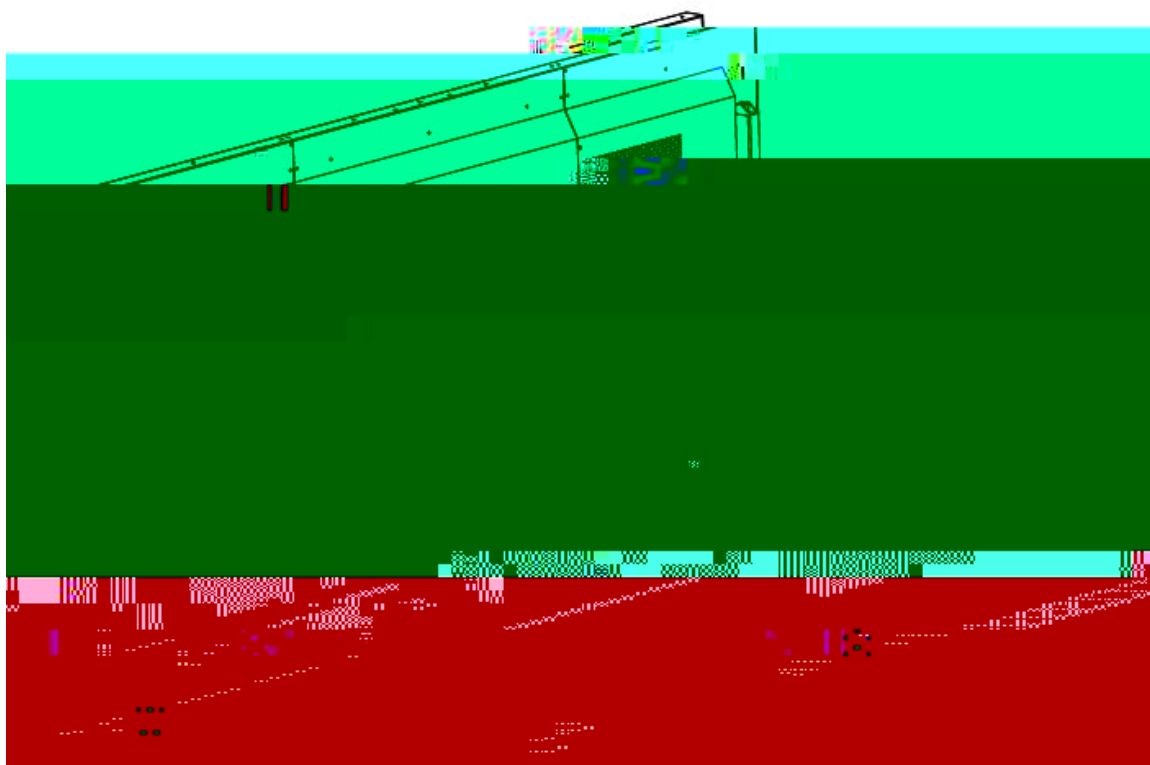

5

M5*100

 E

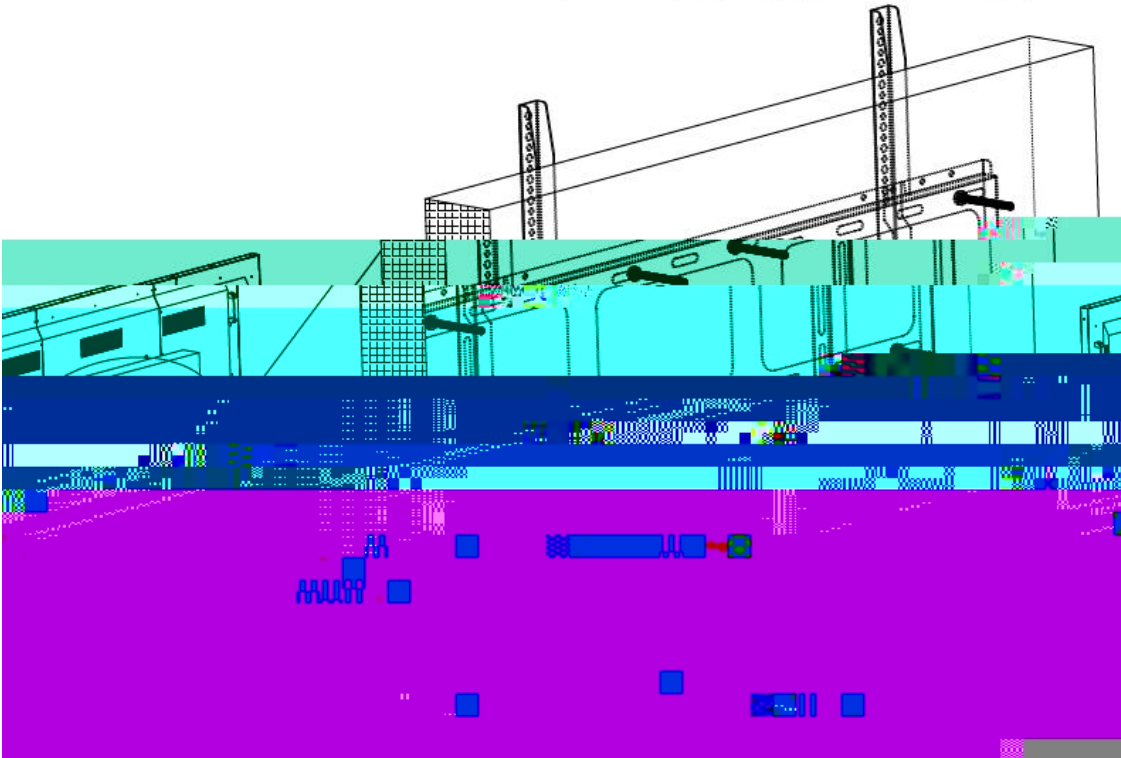

gk

USB

MstarUpgrade_848.bin

U

“ ”



U

USB

USB2.0

10S

È

2

“

”



“ Rr

2
USB TOUCH

现象	解决方案
没有图像 没有声音	- 检查是否插上电源线。 - 按本机或遥控器上的POWER键检查是否为开机状态。
声音正常但色彩不佳	- 选择合适的图像模式。 - 调节图像的亮度。
色彩不佳	调节图像的色彩饱和度。
图像正常，没有声音	本机是否处于静音状态。按静音键取消静音。

Windows 10



1

2

①

USB

USB

②

“ ”

OSD

>

3

4

2-3
