









0 ~45

-40~70

10%~90%RH,

5%~90%RH,






19

- 1.
- 2.
- 3.

10cm

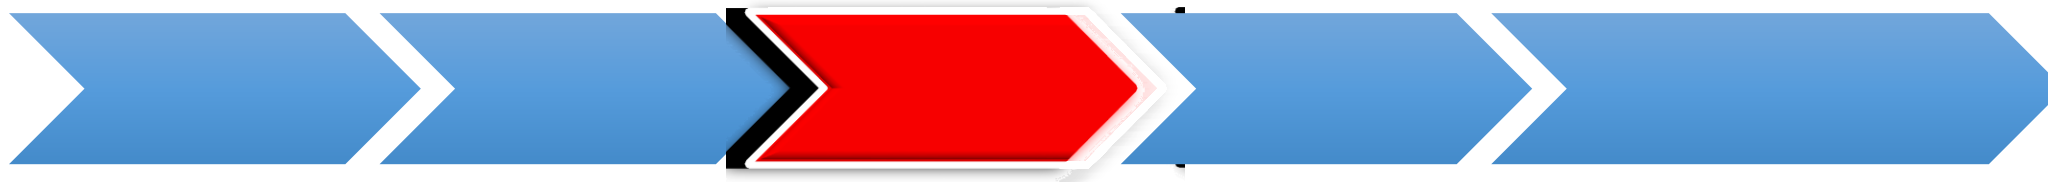

RG-EGM5000-16GE	16	Slot 0		
RG-EGM5000-4G-LTE	4G	Slot 1		
RG-EGM5000-HDD-1T	1T	Slot 1		





EGM5000-16GE






EGM5000-16GE

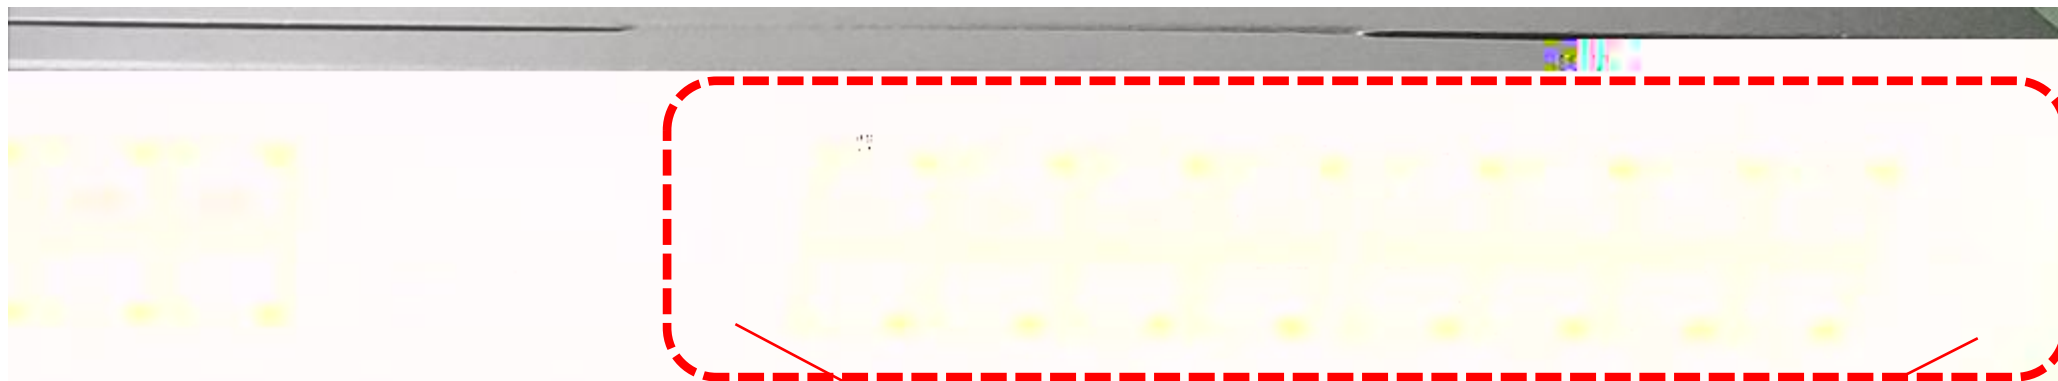


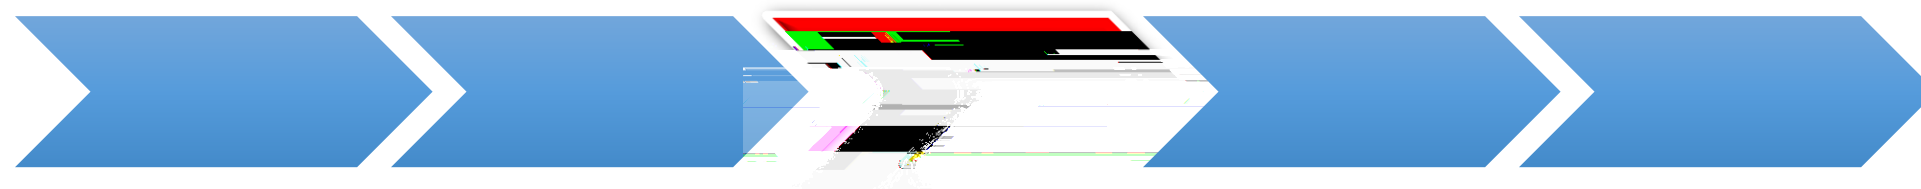


RG-EGM5000-4G-LTE




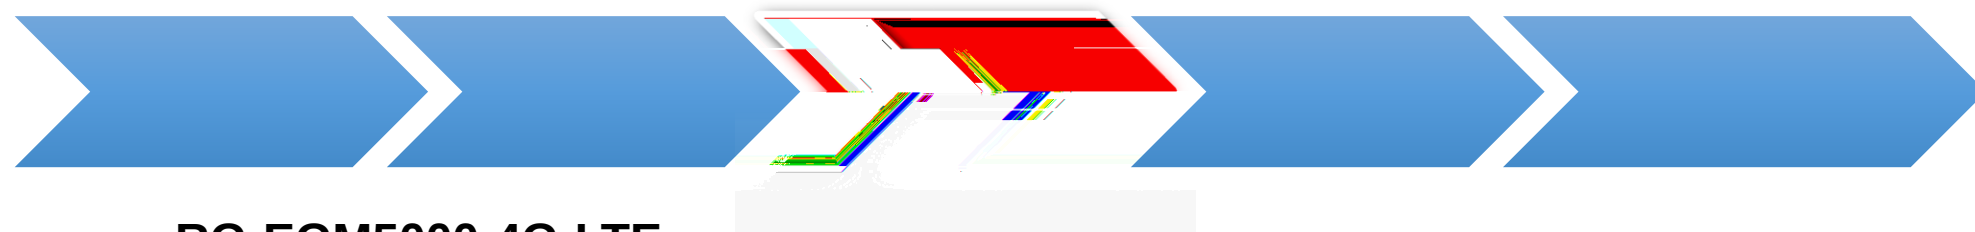


RG-EGM5000-4G-LTE

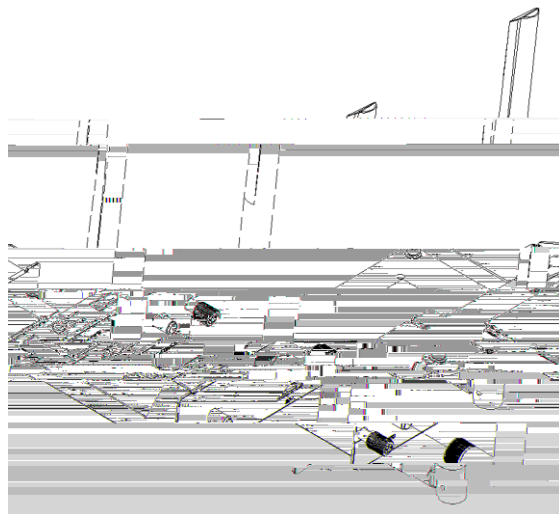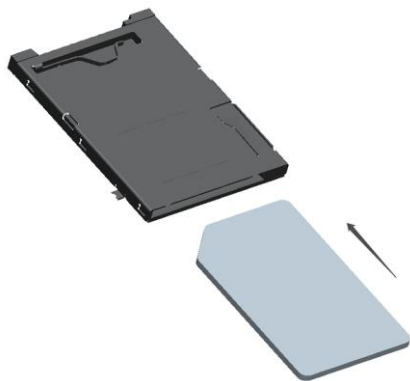

RG-EGM5000-HDD-1T

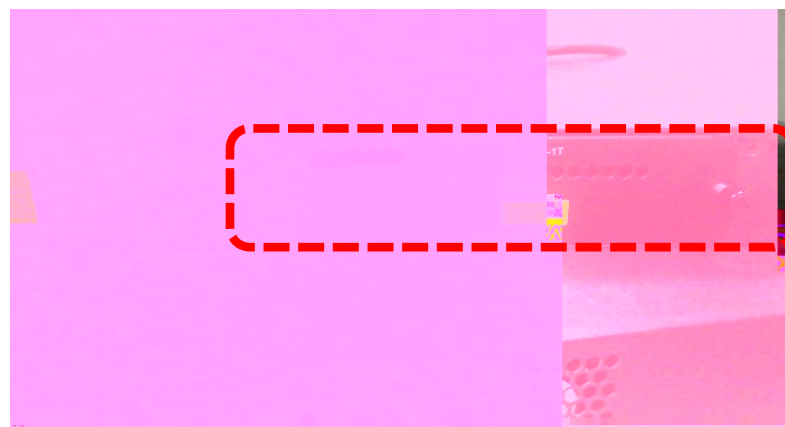


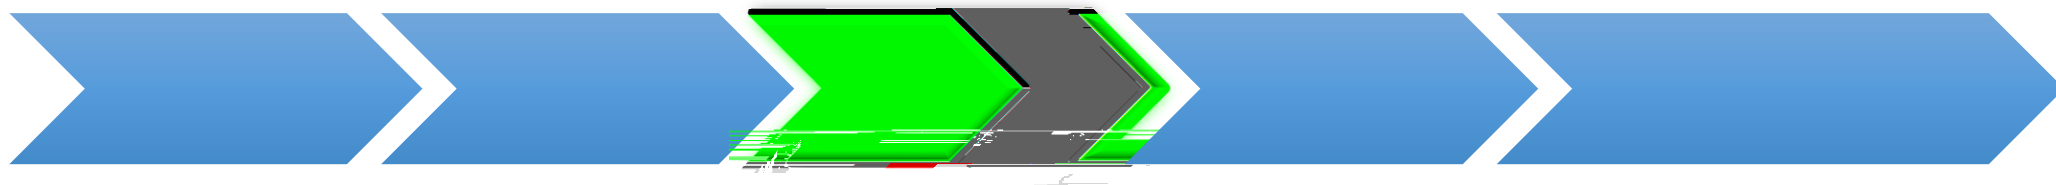



OT


OT

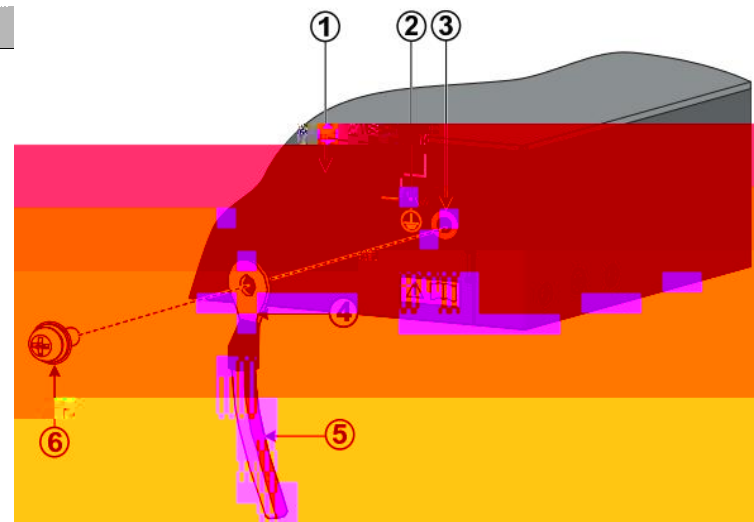

PE


PE

1	
2	
3	
4	OT
5	
6	

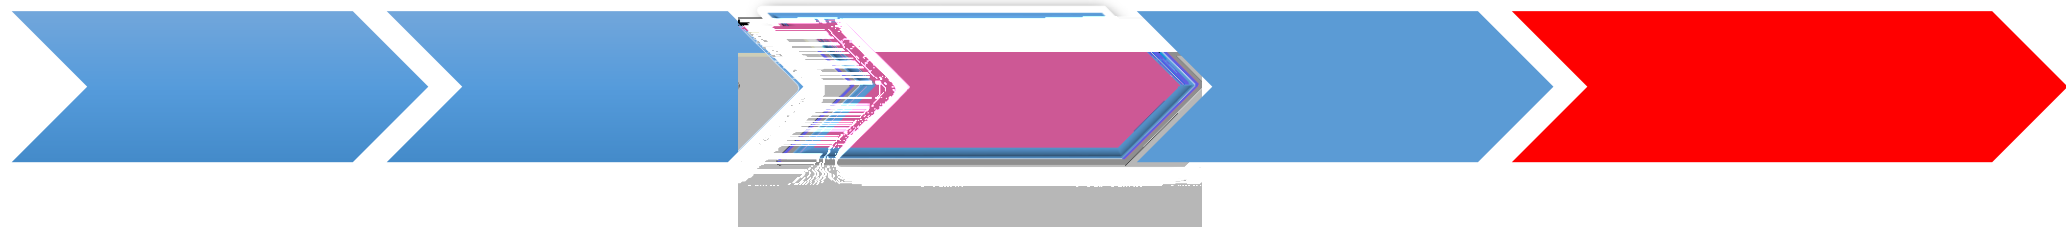






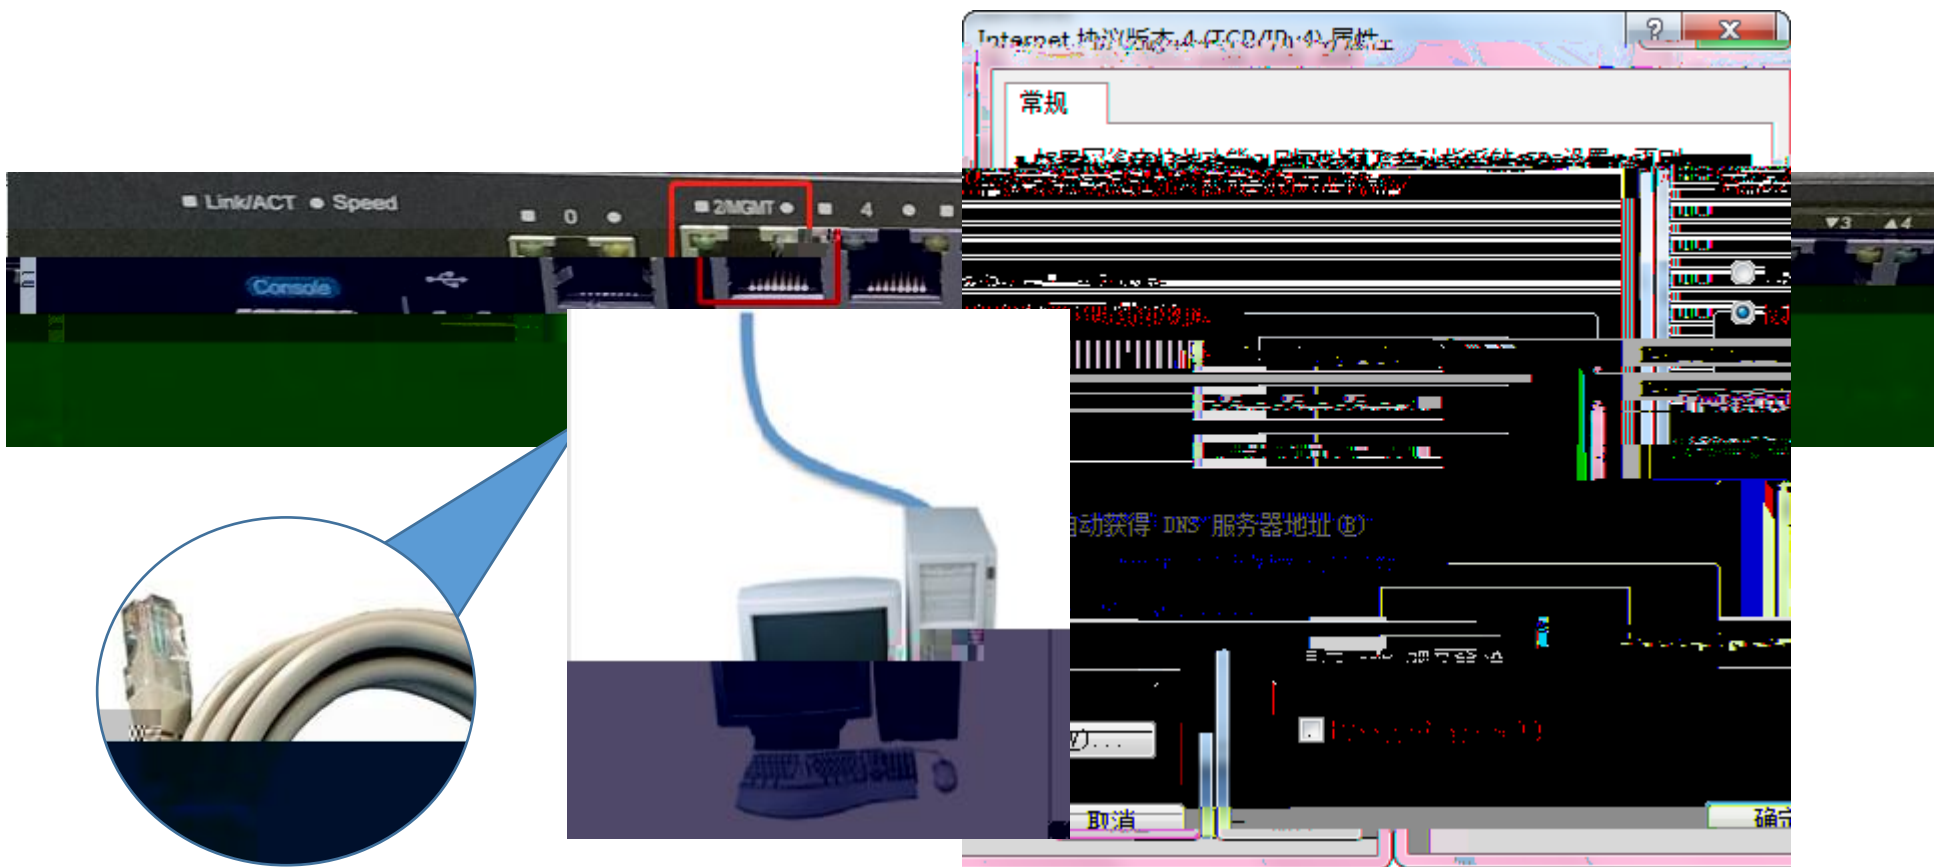



Web

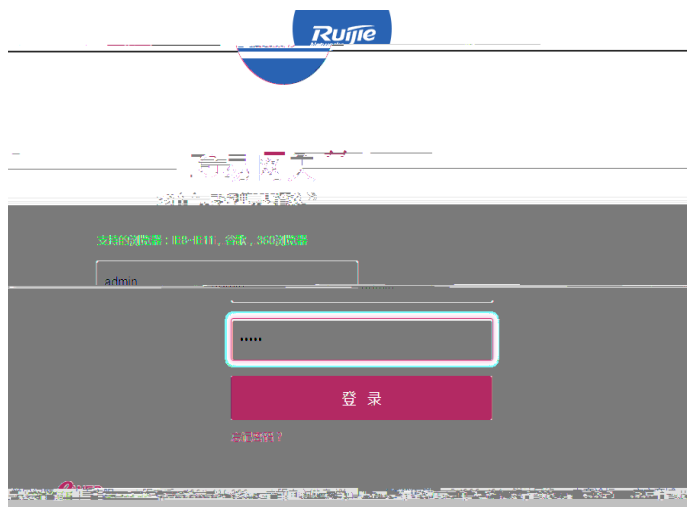



ip

WiFi

EG5200-P

NAT()





锐捷 RG5200 P 快速配置向导

选择

接口配置

WIFI设置

保存配置

快速配置向导

快速配置向导

快速配置向导

各种场景

中小企业

智能企业流控，办公无忧

通用

配置全面，适用

下一步



Ruijie锐捷

EG5200-P 快速配置向导

退出

选择场景

接口配置

WAN配置

保存配置

已上电

未上电

已选中

说明：选中接口即可配置

0/0 0/0/0 0/0/0

0/0/0 0/0/0 0/0/0

外网口：

0 10F(SFP) 11F(SFP)

Gi0/1

1

0(Gi0/0):

动态IP(DHCP)

 - DHCP检测 WANC


管理地址不允许变更，请通过LAN

 
口登录修订。


内网口：

Gi0/2

2MGWT

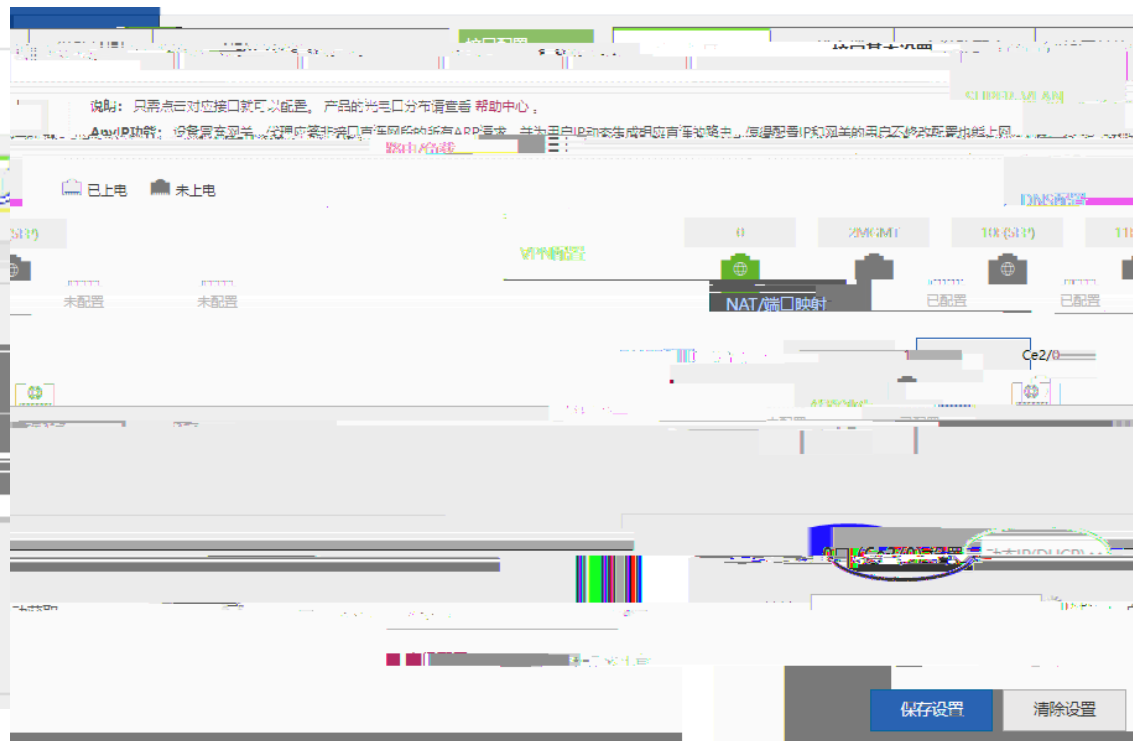





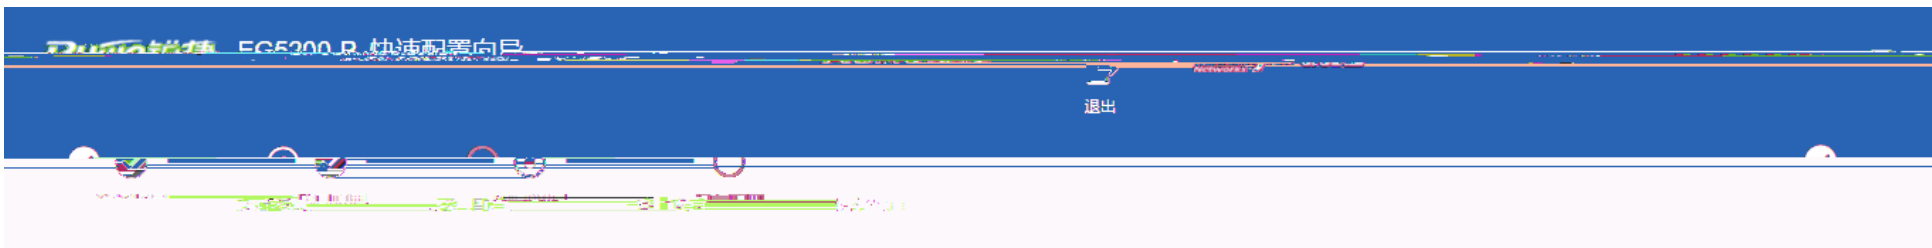


WIFI名称:

WIFI密码: ☐ 显示密码

暂不配置 

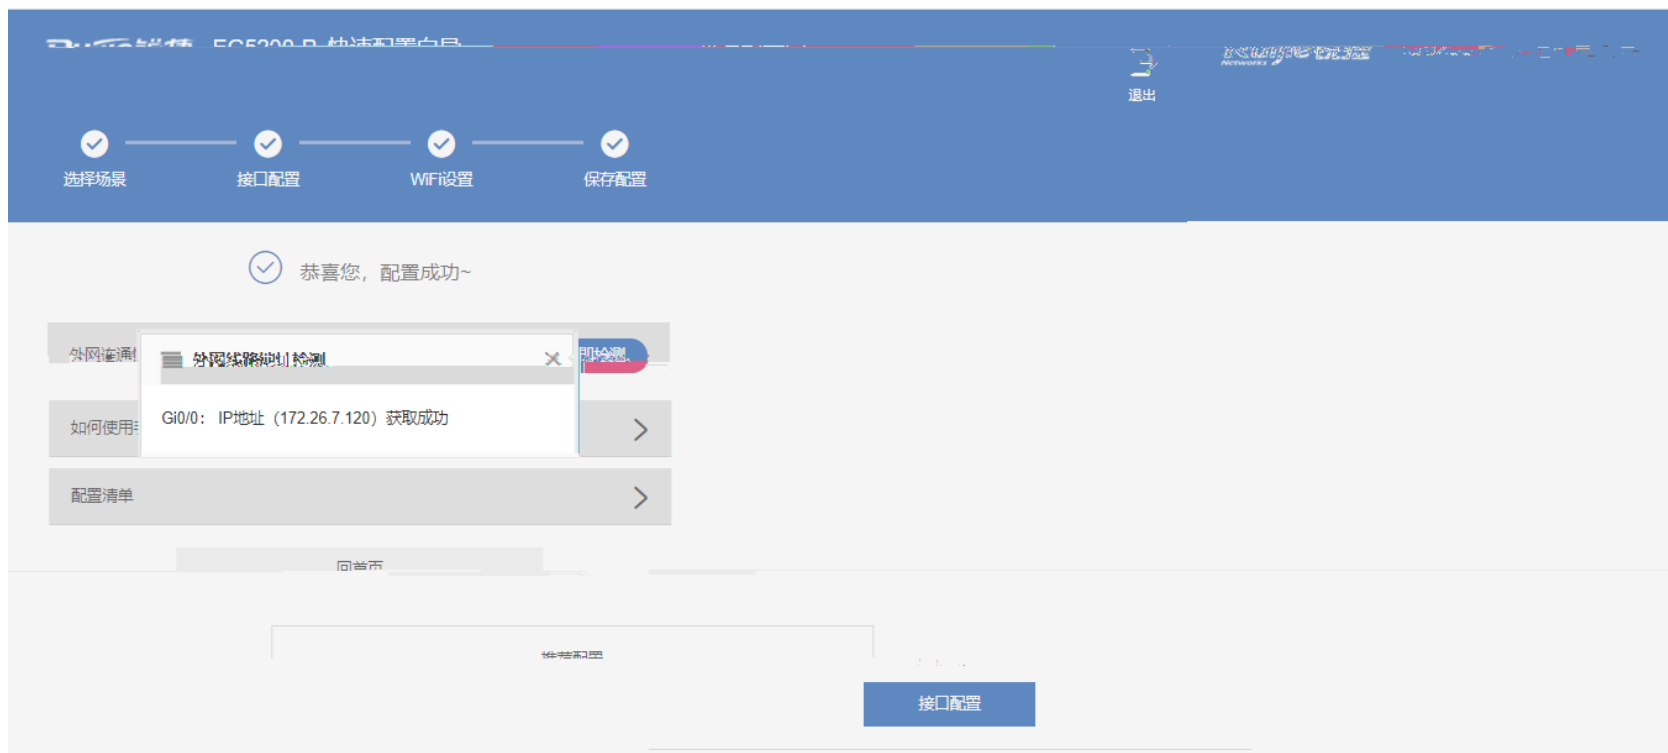

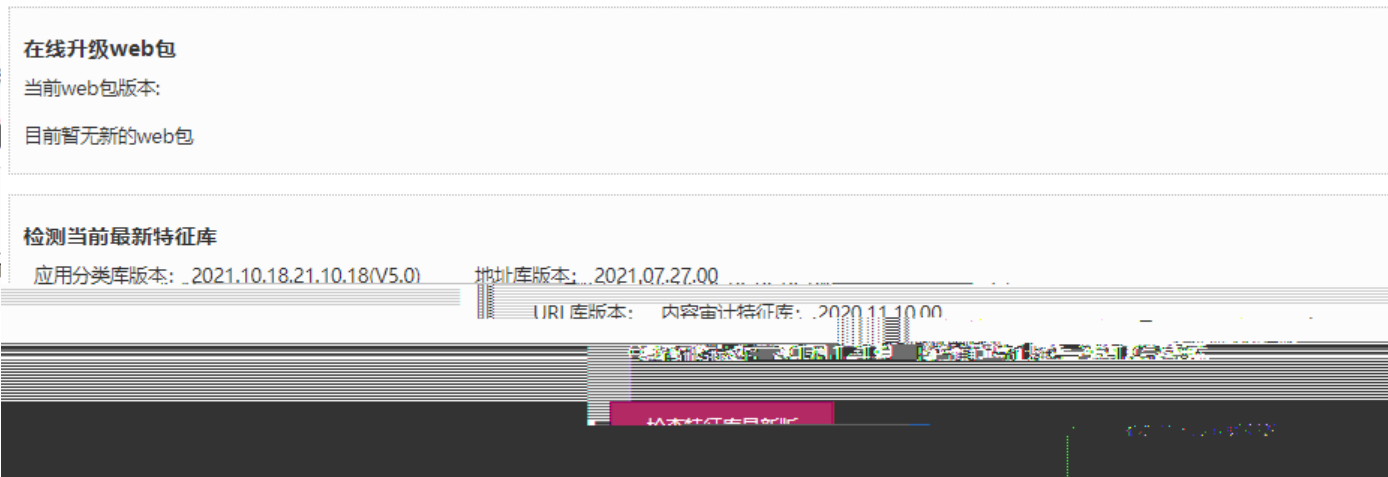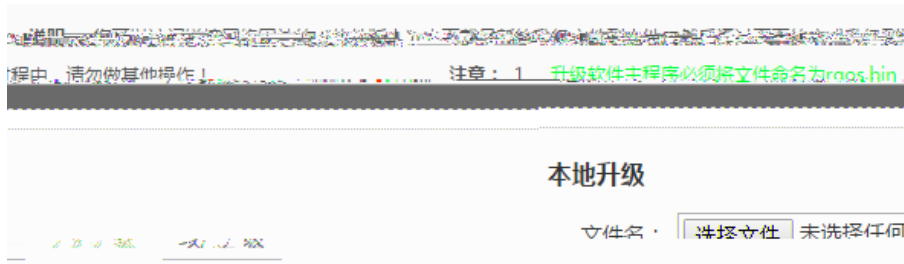

改密码

重启设备

恢复出厂设置

配置备份

系统时间

增强功能

SNMP/SAM

首页

系统升级

安全认证

网络诊断

行为管理

网络

无线

有线

高级

明: admin用户拥有配置和查看设备信息的所有权限。

三、如果你设置了新的密码,则在设置之后使用新的密码登录。密码不能含有特殊字符,且不能与空格、管理员用户名经过等字符。

1.1.1 网络中心环境

admin

新密码:

确认新密码:

确认修改

清空

用户名: admin

新密码:

确认新密码:

确认修改

清空

